


Summer is over! Now it's time to adjust your thermostat from Cool to Heat

1. Open the door and press the “**SYSTEM**” button until the word “**HEAT**” is in the upper right corner of the display.



2. The display will change to “**HEAT**”. Set the temperature to your desired temperature (higher than the current room temperature). You will hear a faint “click” and the heat will come on.
(Note: on some systems there could be a 10-15 minute delay). Once you hear the fan running, you should feel warm air at the vent.

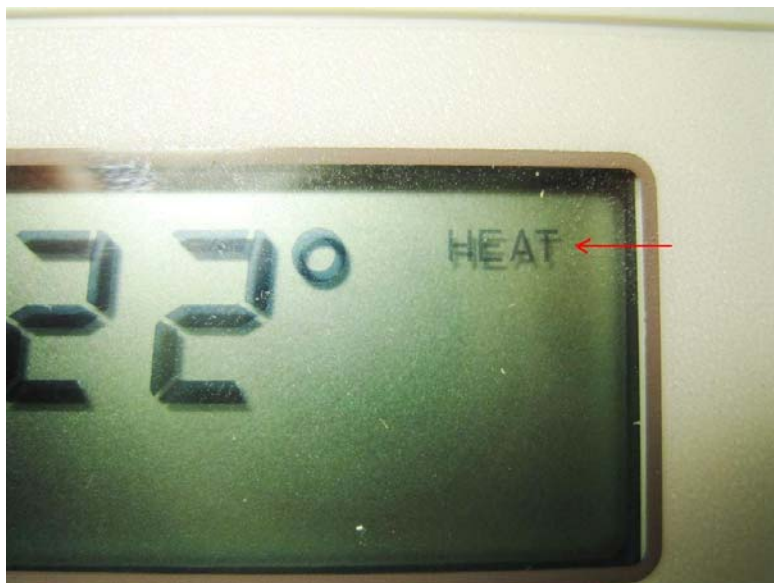

Additional troubleshooting tips

- Press SYSTEM to set the system to HEAT. Make sure the temperature is set higher than the inside temperature
- Check circuit breaker and reset if necessary
- Make sure power switch at heating and cooling system is on
- Make sure furnace door is closed securely

If after these steps the heating does not come on, (could take anywhere from 5 to 10 minutes) please contact **peaksaver®** at **1-866-514-6778**

peaksaver® is a registered trademark of Toronto Hydro Corporation. Used under license